SONANCE

PROFESSIONAL SERIES PS-S210SUBT BRACKET

QUICKSTART GUIDE


BOX CONTENTS

PS-S210SUBT Subwoofer Bracket
M10 x 1.5mm Bolts
Washers
Quickstart Guide


INSTALLATION

Use this bracket only with the Sonance PS-S210SUBT subwoofer (PN 40192) sold separately.


 Mark and pre-drill mounting points in at least four locations (six locations recommended as shown in Figure 1).

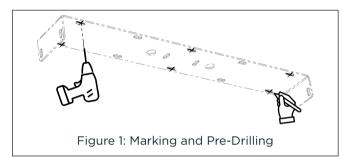


 Secure the bracket to the installation surface. Use high-quality, graded lag bolts or similar fasteners rated for > 150 lbs (180kg) each of shear working load. M10 or 3/8" bolts are recommended. To prevent excessive vibration transference, use a damping material (such as mass-loaded vinyl, neoprene foam, rubber sheets, etc.) between the bracket and installation surface (see Figure 2).

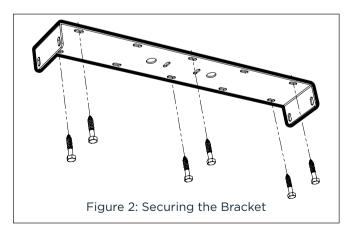


3. With the help of an assistant, lift the subwoofer into place. The sub can be installed in two orientations (see figure 3).

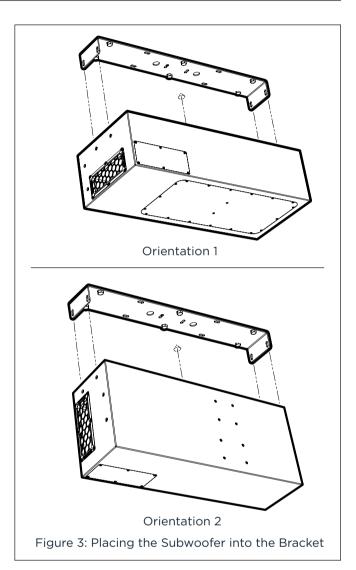

 Secure the sub to the bracket with the four included M10 x 1.5mm bolts and lock washers (see Figure 4).

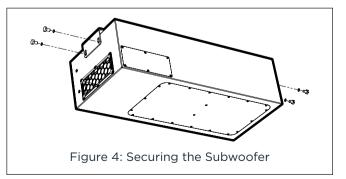

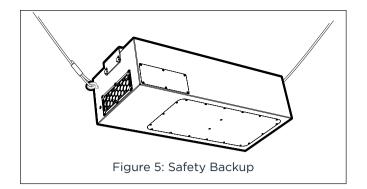

5. Recommended: for safety backup, connect eyebolts and rigging (not included) to the builtin M10 flypoints on both ends of the cabinet. Consult a structural engineer on every installation to ensure the appropriate hardware and rigging are implemented in accordance to local code and regulations (see Figure 5).



For warranty information and detailed installation support, access the full manual here. For technical support call 949.492.7777 or visit www.sonance.com ©2025 Sonance. All rights reserved. Sonance is a registered trademark of Dana Innovations. Due to continuous product improvement, all features and specifications are subject to change without notice. For the latest Sonance product specification information visit our website: www.sonance.com

SONANCE • 991 Calle Amanecer • San Clemente, CA 92673 • (949) 492-7777 01.24.2025